


V6 Cylinder

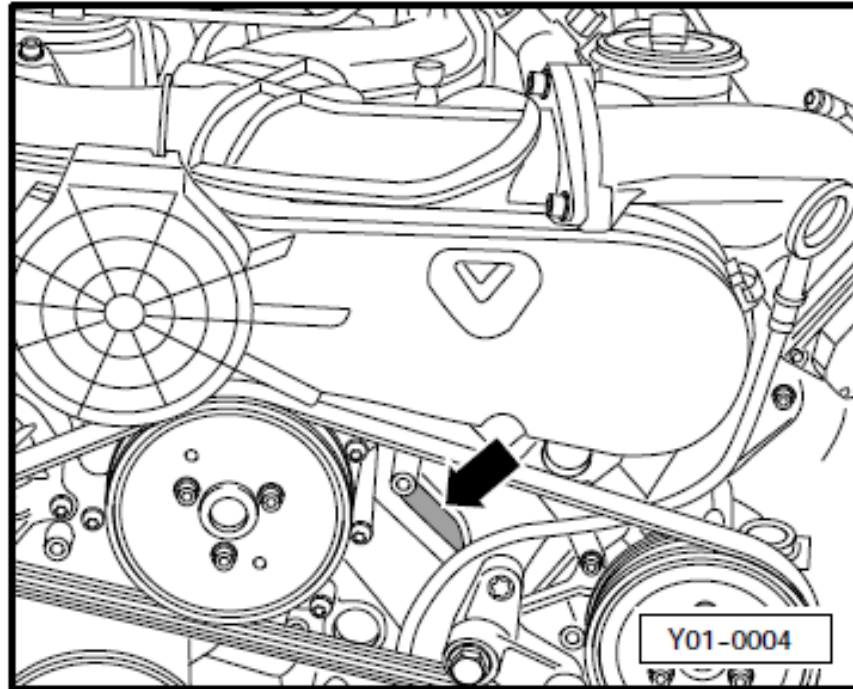

Technical Data

Engine number

- ◀ The engine number ("engine code letters" and "serial number") is located on the front left hand side underneath the toothed belt of the injection pump -Arrow-.

In addition, an adhesive label with "engine code letters" and "serial number" is located on the toothed belt guard.